

单相三線式 150A 105V / 210V
 三相三線式 75A 210V

外開き

FAX 048-573-8769

RAMSA	WR-D100	20 + 6IN	8G	6AUX	
RAMSA	WR-D01	6 + 6IN	8G	6AUX	
EAW	JFX590	SBX220			1対
					1対
RAMSA	WS-A200				1対
RAMSA	WS-A200				1対
RAMSA	WR-9600				2
RAMSA	WR-9150				3
RAMSA	WR-9150				1
RAMSA	WR-9300	WR-9150			各1
KLARK-TEKNIK	DN-500				2
KLARK-TEKNIK	DN-360				1
YAMAHA	SPX-990				1
SONY	CDP-990				1
SONY	MDS-E58				2
TASCAM	MD-CD1				1
TASCAM	122MK-				2
TASCAM	122MK-				1
SONY	DTC-77ES				1
高砂					1
サンゲン	CMS-2				1
RAMSA	WX-R822				6波
RAMSA	WX-TB816-K				6
Panasonic	WX-4212				4
RAMSA	WX-TB831				6
SHURE	SM58-LCE				4
SHURE	SM58SE				4
SHURE	SM57-LCE				4
SHURE	SM87A				2
SONY	C-38B				2
RAMSA	WM-C70				2
高砂	MF-18T				2
高砂	MF-22T				2
高砂	MS-404				2
RAMSA	WN-275				4
RAMSA	WN-5360				4
RAMSA	WN-5310				4

DMX 番号	回路名称	
1	1BL上下 1	ボーダー
2	1BL上下 2	
3	1BL上下 3	
4	1B 中 1	
5	1B 中 2	
6	1B 中 3	
7	1SUS 1	1サス
8	1SUS 2	
9	1SUS 3	
10	1SUS 4	
11	1SUS 5	
12	1SUS 6	
13	1SUS 7	
14	1SUS 8	
15	1SUS 9	
16	1SUS 10	
17	1SUS 11	
18	1SUS 12	
19	2SUS 1	2サス
20	2SUS 2	
21	2SUS 3	
22	2SUS 4	
23	2SUS 5	
24	2SUS 6	
25	2SUS 7	
26	2SUS 8	
27	2SUS 9	
28	2SUS 10	
29	2SUS 11	
30	2SUS 12	
31	天反 1	天反
32	天反 2	
33	UH 1	U.H
34	UH 2	
35	UH 3	
36	UH 4	
37	UH 5	
38	UH 6	
39	CL 1	シーリング
40	CL 2	
41	CL 3	
42	CL 4	
43	CL 5	
44	CL 6	
45	CL 7	
46	CL 8	
47	CL 9	
48	CL 10	
49	FS上1	フロント
50	FS上2	
51	FS上3	
52	FS下1	
53	FS下2	
54	FS下3	
55	GC上1	ギャラリー
56	GC下1	
57	GC上2	
58	GC下2	
59	F1	Foot
60	F2	
61	F3	
62	FC前1	前FC
63	FC前2	

DMX 番号			
64	FC上 1	フロア	
65	FC上 2		
66	FC上 3		
67	FC上 4		
68	FC上 5		
69	FC上 6		
70	FC下 1		
71	FC下 2		
72	FC下 3		
73	FC下 4		
74	FC下 5		
75	FC下 6		
76	FC奥上1		
77	FC奥上2		
78	FC奥上3		
79	FC奥下1		
80	FC奥下2		
81	FC奥下3		
82	WC上 1	ウォール	
83	WC上 2		
84	WC上 3		
85	WC上 4		
86	WC下 1		
87	WC下 2		
88	WC下 3		
89	WC下 4		
90			
91	客電 1	1A	客電
92	客電 2	1B	
93	客電 3	1C	
94	客電 4	2D	
95	客電 5	2E	
96	客電 6	2F	
97	客電 7	3A	
98	客電 8	3B	
99	客電 9	3C	
100	客電 10	3D	